

RYOBI / ITEK CROSS REFERENCE LIST



803 Randolph St
 Valdosta, GA 31602
 229.241.8022
 229.241.8023 (fax)
therollerstore@gmail.com

RYOBI PART #	ITEK PART #	DESCRIPTION	# ON PART
90 070	5290 90 070	Belt, V	A-40
90 071	5290 90 071	Belt, V	A-41
90 072	5340 90 072	Belt, V	3V670
90 077	5327 90 077	Belt	73229-6HTD2
90 078	5327 90 078	Belt, timing	432-3M6
90 091	5321 90 091	Belt (NPI)	150L050
90 098	5290 90 098	Belt, V	3V80
90 100	5290 90 100	Belt, V	A-30
90 101	5290 90 101	Belt, V	A-35
90 102	5290 90 102	Belt, V	A-36
90 103	5290 90 103	Belt, V	A-40
90 104	5290 90 104	Belt, V	A-41
90 132	5330 90 132	Belt, V (50Hz)	A-39
90 164	5290 90 164	Knob	
90 178	5290 90 178	Screw, set	M5 x 5
90 179	5341 90 179	Screw, set	M5 x 8
90 181	5340 90 181	Screw	M4 x 8
90 200	5300 90 200	Bearing, ball	607ZZ
90 201	5290 90 201	Bearing, ball	609VV
90 202	5290 90 202	Bearing, ball	624ZZ
90 203	5290 90 203	Bearing, ball	625ZZ
90 204	5290 90 204	Bearing, ball	6001ZZ
90 205	5290 90 205	Bearing, ball	6001LLB
90 206	5290 90 206	Bearing, ball	6201ZZ
90 207	5290 90 207	Bearing	62031ZZ
90 208	5290 90 208	Bearing, ball	6205VV
90 209	5290 90 209	Bearing	6205LLBC2P6
90 210	5290 90 210	Bearing	6206LLBC2P6
90 211	5290 90 211	Bearing, ball	6202ZZ
90 212	5330 90 212	Bearing, ball	629
90 214	5290 90 214	Bearing, ball	6000ZZ
90 218	5330 90 218	Bearing, ball	6002
90 220	5290 90 220	Bearing, thrust	51103
90 228	5300 90 228	Bearing, thrust	51100
90 230	5290 90 230	Inner race IR	10 x 13 x 12.5
90 240	5290 90 240	Roller (NTN)	1210

RYOBI / ITEK CROSS REFERENCE LIST

90 241	5290 90 241	Bushing	MB1220DU
90 242	5290 90 242	Bushing	MB1210DU
90 247	5290 90 247	Bushing	MB1010DU
90 239	5290 90 293	Bearing	6204ZZ
90 307	5330 90 307	Bearing, ball	605ZZ
90 308	5290 90 308	Bearing, ball	606ZZ
90 315	5330 90 315	Bearing, ball	6003ZZ
90 316	5321 90 316	Bearing, ball NPI	6004ZZ
90 318	5290 90 318	Bearing, ball	608ZZ
90 319	5321 90 316	Bearing, ball NPI	6203ZZ
90 331	5340 90 331	Bearing, ball	607DDU
90 352	5330 90 352	Bearing, ball	698ZZ
90 357	5340 90 357	Bearing	6001LLU
90 364	5340 90 364	Bearing	6902ZZ
90 368	5330 90 368	Washer, thrust	AS1102
90 371	5290 90 371	Washer, thrust	AS1101
90 400	5290 90 400	Ball, steel	5/16.
90 401	5290 90 401	Ball, steel	3/16.
90 408	5340 90 408	Ball, steel	3/8.
90 436	5290 90 436	Clutch, one-way	HF1216
90 437	5290 90 437	Clutch, one-way	
90 441	5290 90 441	Bushing	1208
90 447	5340 90 447	Bushing	MB1612DU
90 459	5330 90 459	Rod end	SFR18
90 460	5330 90 460	Rod end	SFR18L
90 461	5322 90 461	Bearing, ball	SS6001ZRS
90 474	5330 90 474	Bearing	6008VVCM
90 475	5330 90 475	Bearing, ball	6206LLB
90 476	5330 90 476	Bearing, ball	6207LLB
90 477	5330 90 477	Bearing, thrust	T8-16
90 478	5330 90 478	Bearing, thrust	T6-12
90 479	5330 90 479	Bearing, thrust	WS81102
90 480	5330 90 480	Bearing, thrust	AXDX1102
90 481	5330 90 481	Bearing, ball	696ZZ
90 500	5290 90 500	Ring, O	P-4
90 502	5290 90 502	Ring, O	P-46
90 505	5290 90 505	Ring, O	P-16
90 510	5290 90 510	Ring, O	P-6
90 511	5290 90 511	Ring, O	P-20
90 512	5290 90 512	Ring, O	P-10A
90 514	5290 90 514	Ring, O	P-12
90 550	5290 90 550	Ring, O	#10
90 552	5290 90 552	Ring, O	P-16
90 576	5340 90 576	Bearing	6904ZZ

RYOBI / ITEK CROSS REFERENCE LIST

90 584	5290 90 584	Inner ring	
90 599	5340 90 599	Bushing	MB1206DU
90 600	5290 90 600	Ring, CE	CE-4
90 601	5290 90 601	Ring, CE	CE-8
90 603	5290 90 603	Ring, CE	CE-12
90 604	5340 90 604	Ring, CE	CE-26
90 605	5340 90 605	Ring, CE	CE-6
90 606	H7402032	Ring, CE	CE-12
90 607	H7402068	Ring, CE	CE-18
90 609	5340 90 609	Ring, BE	BE-80
90 610	5290 90 610	Ring, BE	BE-60
90 619	5290 90 619	Ring, SE	SE-20
90 620	5290 90 620	Ring, G	C-6
90 626	H7402022	Ring, G	G-8
90 627	5340 90 627	Ring, G	G-7
90 628	5290 90 628	Pin, snap	SSP-4
90 629	5290 90 629	Pin, snap	
90 630	5290 90 630	Pin, snap	SSP-8
90 640	5340 90 640	Washer, lock (toothed)	B6
90 642	5290 90 642	Washer, lock (toothed)	B8
90 643	5340 90 643	Washer, lock (toothed)	B5
90 644	5340 90 644	Washer, lock (toothed)	A3
90 651	5290 90 651	Ring, GS	GS-6
90 652	5330 90 652	Ring, GS	GS-5
90 653	H7402014	Ring, GS	GS-12
90 654	5330 90 654	Ring, GS	GS-8
90 656	5340 90 656	Ring, GS	
90 670	5330 90 670	Screw, hex pan head	M4 x
90 672	5321 90 672	Bolt, left thread	M8 x 16
90 674	5290 90 674	Washer	
90 675	5330 90 675	Bearing	6000DDU
90 678	5290 90 678	Nut, U (fine thread)	M8
90 679	5340 90 679	Spring	L-12
90 680	5310 90 680	Spring, coned disc	R-21
90 685	5330 90 685	Nut, hex	M8
90 688	5290 90 688	Spring, coned disc	L8
90 690	5300 90 690	Washer, spring	M10
90 692	5340 90 692	Spring	L-10
90 699	5340 90 699	Nut, U	M5
90 700	5290 90 700	Nut, U	M8
90 701	5290 90 701	Nut, U	M10
90 703	5330 90 703	Nut, U	M6
90 705	5300 90 705	Screw, set	1/4.
90 710	5290 90 710	Nut, hex	M10

RYOBI / ITEK CROSS REFERENCE LIST

90 711	5290 90 711	Nut, hex	M8
90 720	5290 90 720	Nut, lock	AN02
90 721	5290 90 721	Washer, lock	AW02
90 726	5321 90 726	Nut, lock	AN05
90 727	5321 90 727	Washer, lock	AW05
90 730	5290 90 730	Rivet	1.6 x 5
90 740	5290 90 740	Bolt, knob	M5 x 15
90 741	5330 90 741	Bolt, knob	M5 x 10
90 751	5290 90 751	Grip, ball (25 - red)	
90 752	5290 90 752	Grip, ball (25 - black)	
90 758	5290 90 758	Grip, ball (use 5290 33 525)	
90 760	5300 90 760	Screw, tapping	3 x 6
90 770	5290 90 770	Screw, wood	4.1 x 20
90 773	5340 90 773	Screw, wood	4.8 x 20
90 782	5290 90 782	Bolt, knob	M5 x 20
90 784	5290 90 784	Nut, lock	M8
90 790	5290 90 790	Screw	
90 800	5290 90 800	Chain	RS37-1-113P
90 801	5290 90 801	Chain	RS37-1-66P
90 802	5290 90 802	Chain	RS35-1-46P
90 804	5300 90 804	Chain	RS25-83P
90 805	5290 90 805	Chain	RS25-99P
90 810	5300 90 810	Screw	M6 x 8
90 811	5290 90 811	Screw	M6 x 16
90 813	5300 90 813	Screw	M5 x 10
90 816	5290 90 816	Screw, tapping	2.5 x 6
90 836	5310 90 836	Chain	RS37-1-59P
90 838	5330 90 838	Chain	RS37-1-180P
90 839	5330 90 839	Chain	RS37-1-74P
90 840	5340 90 840	Chain	RS25-48P
90 841	5300 87 412	Chain	RS40-1-40P
90 842	5340 90 842	Chain	RS37-1
90 843	5340 90 843	Chain	RS37-1-50P
90 844	5290 90 844	Chain	
90 845	5290 90 845	Chain	
90 846	5290 90 846	Chain	RS-25-181P
90 847	5290 90 847	Chain	
90 848	90355010	Chain	RS35-1
90 849	5290 90 849	Chain	RS37-1
90 852	5290 90 852	Link, joint	RS25
90 853	5290 90 853	Link, joint	RF2040
90 854	5290 90 854	Link, joint	RS35-1
90 856	5290 90 856	Link, joint	RS37-1
90 890	5340 90 890	Bushing	606

RYOBI / ITEK CROSS REFERENCE LIST

90 893	5290 90 893	Clutch, one-way	FC13-12
90 896	5209 90 896	Guard	THA-2163423
90 897	5290 90 897	Rivet	1.6 x 3.2
90 898	5290 90 898	Clutch, one-way	FCB-12
90 900	5290 90 900	Key	5 x 5 x 16
90 904	5340 90 904	Key	
90 906	5330 90 906	Key	6 x 6 x 36
90 924	5290 90 924	Nut, domed cap	
90 942	5290 90 942	Bushing	MB1210DU
90 949	5290 90 949	Screw, binding	M6 x 20
91 000	5290 91 000	Counter, total	RS-204-5
91 057	5340 91 057	Pump, oil	LA-W8D
91 058	5340 91 058	Hed	JHD-306
91 060	5340 91 060	Connector	PQ 10T
91 061	5340 91 061	Pipe	AS2-170
91 062	5340 91 062	Band	PZ 544
91 063	5340 91 063	Band	PZ 184
91 065	5340 91 065	Plunger	DPB-16
91 066	5340 91 066	Plunger	DPB-15
91 068	5290 91 068	Plunger, dester	DPB-18
91 069	5290 91 069	Plunger, dester	DPB-16
91097	5512 91 097	Gasket (packing)	
91 100-1	5290 16 215	Pump	
91 137	5290 91 137	Band	PZ-5240
91 150	5290 91 150	Wick	
91 152	5340 91 152	Nipple	PD-6
91 160	5340 91 160	Plug	PA-4
91 161	5340 91 161	Sleeve	P13-4
91 162	5340 91 162	Nipple	PD-4
91 165	5321 91 165	Band, pipe	PZ-14
91 166	5340 91 166	Band, pipe	PZ-24
91 167	5340 91 167	Band, pipe	P2-34
91 169	5340 91 169	Elbow	PEF-4
91 170	5340 91 170	Nipple	EFF-4
91 171	5340 91 171	Elbow	PH-6
91 172	5340 91 172	Sleeve	PBH-6
91 173	5340 91 173	Plug	PA-6
91 180	5340 91 180	Pipe holder	PZ-16
91 186	5340 91 186	Separator	PKD-6
91 190	,08327606	Band, hose - replaced by clamp	13
91 200	5290 91 200	Nipple, hose	PT3/4
91 201	5300 91 201	Nipple, hose	PT3/8
91 203	5290 91 203	Elbow	PHD-4
91 211	,08327606	Band, hose - replaced by clamp	16

RYOBI / ITEK CROSS REFERENCE LIST

91 212	5290 91 212	Band, hose	25
91 213	5330 90 213	Band, hose	19
91 220	5290 91 220	Hose	10 x 17 x 500
91 221	5290 91 221	Hose	10 x 17 x 420
91 222	5290 91 222	Hose	15 x 22 x 700
91 225	5290 91 225	Hose	7.8 x 18 x 310
91 226	5290 91 228	Hose	9 x 15 x 485
91 228	5290 91 228	Hose	9 x 15 x 485
91 229	5300 91 229	Hose	7.8 x 18 x 150
91 231	5290 91 2311	Bushing	3/4 x 3/8
91 232	5290 91 232	Elbow	3/4.
91 233	5290 91 233	Elbow	3/4.
91 234	5290 91 234	Elbow	3/4.
91 235	5340 91 235	Elbow	1/4.
91 236	5290 91 236	Elbow	1/8.
91 237	5290 91 237	Nipple	1/8.
91 238	5340 91 238	Nipple	1/4.
91 239	5290 91 239	Socket	
91 240	5290 91 240	Nipple	3/4.
91 241-1	5290 91 2411	Socket	1/8 x 1/4
91 250	5290 91 250	Cup, oil	1/4.
91 251	5290 91 251	Cup, oil (use 5290 91 250)	6
91 254	5290 91 254	Nipple	NIP-B6
91 258	5340 91 258	Nipple	1/4.
91 280	5340 91 280	Elbow	1/4.
91 298	5330 91 298	Nipple	C-Type
91 300	5290 90 301	Hinge	
91 301	5290 91 301	Hinge	
91 312	5300 91 312	Catch, magnet	C-100-A-2
91 321	5340 91 321	Magnet	
91 324	5290 83 351	Connector	
91 327	5290 91 327	Saddle	
91 331	5340 91 331	Plug, seal	Pg006
91 332	5290 91 332	Cross	PJD-406
91 335	5340 91 057	Pump, oil	LA-W8D
91 336	5321 91 336	Pipe	6
91 337	5321 91 337	Pipe, aluminum	
91 338	5340 91 338	Pipe	4
91 350	5290 90 350	Caster	420C-N-75
91 352	5300 91 352	Caster, ball	140-20
91 355	5290 91 355	Plug, seal	PG-004
91 375	5340 91 375	Plunger, dester	DPB-12
91 381	5290 91 381	Plunger, dester	DPB-13
91 382	5321 91 382	Foot, rubber	C-30 RK-20

RYOBI / ITEK CROSS REFERENCE LIST

91 384	5290 91 384	Band, pipe	PZ534
91 400	5290 91 400	Wrench	17 x 19
91 401	5290 91 401	Spanner	13 x 17
91 402	5290 91 402	Spanner	8 x 10
91 410	5290 91 410	Wrench, T-handle	13
91 411	5300 91 411	Wrench, T-handle	10
91 420	LOCAL	Key, hexagon wrench	5
91 421	LOCAL	Key, hexagon wrench	4
91 422	LOCAL	Key, hexagon wrench	3
91 423	LOCAL	Key, hexagon wrench	2.5
91 429	5321 91 429	Driver, ball	#4
91 430	5290 91 430	Driver	(+) 100mm
91 431	5290 91 431	Driver	(-) 100mm
91 442	5330 91 442	Gun, oil	
91 452	5290 91 452	Driver (wood handle)	(+) 100mm
91 454	5290 91 454	Spanner	10 x 13
91 464	5321 91 464	Caster	420 EAN50
91 465	5321 91 465	Caster	415 EAN50
91 466	5321 91 466	Casters with lock levers	
91 470	5340 91 470	Hinge	B-66-2
91 500	5290 91 500	Oiler	
91 531	5290 91 531	Gun, grease	
91 532	5290 91 532	Pump oil (equivalent to ABD action oil)	
91 551	5300 91 551	Tape for tape inserter	20
91 606	5290 91 606	Rod end	RMM08 DU3
91 609	5321 91 609	Bearing, ball	6900ZZ
91 611	5321 91 611	Sleeve	6
91 619	5321 91 619	Bearing, ball	6205ZZCM
91 620	5340 91 620	Bearing	6008ZZCM
91 621	5340 91 621	Bearing	6207ZZCM
91 622	5340 91 622	Bearing	6905ZZCM
91 623	5340 91 623	Bearing	6909ZZCM
91 624	5340 91 624	Bearing	6913ZZ
91 625	5290 91 625	Bearing	6901ZZ
91 626	5330 91 626	Bearing	6904ZZ
91 627	5340 91 627	Bearing, ball	606HZZML3
91 628	5340 91 628	Bearing, thrust	FNTA-6590
91 629	5340 91 629	Washer, thrust	FTRA-6590
91 630	5340 91 630	Spacer	IR 12 x 15 x 16.5
91 631	5340 91 631	Bearing	HK1516LL
91 632	5340 91 632	Bearing	6007ZZCM
91 633	5340 91 633	Bearing	6206ZZCM
91 665	5290 91 665	Bearing	6305LLBP6
91 685	5330 91 685	Nut, hex	M8, type 3 left

RYOBI / ITEK CROSS REFERENCE LIST

91 706	5290 91 706	One way clutch	
91 709	5290 91 709	Bearing, needle	F-1612
91 712	5321 91 712	Bearing, needle	4902UU
91 726	5290 91 726	Bearing, needle	HK1614L
91 813	5300 91 813	Hose	10 x 13 x 1030
91 814	5300 91 814	Hose	10 x 17 x 670
91 815	5300 91 815	Hose	10 x 17 x 1300
91 816	5300 91 816	Hose	15 x 22 x 390
91 828	5340 91 828	Hose	8 x 12 x 730
91 838	5320 91 838	Hose	10 x 17 x 2200
91 839	5290 91 839	Hose	10 x 13 x 1600
91 845	5290 91 845	Hose	
91 846	5290 91 846	Hose	
91 847	5321 91 847	Hose	
91 848	5340 91 848	Hose	10 x 17 x 2900
91 849	5310 91 849	Hose	10 x 17 x 180
91 850	5310 91 850	Hose	10 x 13 x 2900
91 851	5340 91 851	Hose	15 x 22 x 850
91 852	5340 91 852	Hose	8 x 12 x 240
91 860	5340 91 860	Hose	9 x 15 x 1700
91 866	5340 91 866	Hose	9 x 12 x 1250
91 905	5290 91 905	Rod end	RMM08DU3 left
91 906	5327 91 906	Rod end	
91 907	5290 91 907	Coupling	GJ3-3
91 914	5290 91 914	Retainer	
91 915	5290 91 915	Receptacle	
91 925	5290 91 925	Coupling	
91929	534091929	S+C636pring	
91 930	5290 91 930	Stud	
95 100	5290 95 100	Motor 100v 300w	SC-KS
95 101	5290 97 033	Motor 115v 300w	SC-KS
95 102	5290 95 102	Motor 230V	
95 103	5330 95 103	Motor	
95 104	5330 95 104	Motor 200v 400w	
95 110	5290 95 110	Switch	A-20GV22B
95 111	5290 95 111	Switch	Z-15GYW22B
95 113	5290 95 113	Switch	V-3C2
95 115	5290 95 115	Cover, switch	
95 117	5330 95 117	Cover, switch	AP-B
95 118	5300 95 118	Actuator	VAL2
95 119	5330 95 119	Switch	Z-15GS-B
95 140	5290 95 140	Bushing	SR-5N-4
95 141	5290 95 141	Bushing	
95 142	5310 95 142	Bushing	

RYOBI / ITEK CROSS REFERENCE LIST

95 143	5290 95 143	Bushing	
95 145	5290 95 145	Plug	P500
95 146	5290 95 146	Hole plug	
95 147	5300 95 147	Bushing	SR-7W-2
95 150	5290 95 150	Clamp	3304
95 151	5290 95 151	Clamp	3334
95 152	5290 95 152	Clamp	3337
95 160	5290 95 160	Relay	HG2-AC100V
95 161	5290 95 161	Relay	HG2-AC115V
95 170	5290 95 170	Switch	WD1021 (9)
95 171	5290 95 141	Switch	WD1122 (9)
95 172	5290 95 172	Nut	M12 x 1
95 173	5290 95 173	Ring	12
95 180	5290 95 180	Socket, relay	AP6822
95 181	5290 95 181	Spring	
95 211	5290 95 211	Lamp	VL-18-PH
95 223	5290 95 223	Cord	SVT SWG #18
95 224	5290 95 224	Cord	ST AWG #14
95 240	5290 95 240	Terminal	2-4 (UL)
95 241	5290 95 241	Terminal	1.25-M4 (UL)
95 242	5290 95 242	Terminal	1.25-YS3A
95 244	5290 95 244	Terminal	2-M5
95 250	5290 95 250	Tube	V3/16
95 284	5300 95 284	Switch	MRY-106
95 329	5290 95 329	Switch	WD-122
95 338	5290 95 338	Switch	WK244XP-2U
95 497	5340 95 497	Valve, spray	100V
95 601	5290 95 601	Relay	120VAC KUL11A15S
95 602	5290 95 602	Relay	240VAC KUL11A15S
95 603	5290 95 603	Socket, relay	27E121.
95 901	5327 95 901	Regulator, switching	
95 903	5290 95 903	Buzzer	EB2114
95 904	5290 95 904	Fan	2412PS-12Wb30
95 905	5327 95 905	Fan	DF36A24-0018
96 010	5290 96 010	Spatula	
96 019	5290 96 019	Cover	
96 020	5290 96 020	Cover	
96 021	5300 96 021	Cover	
96 051	5340 96 051	Inverter	
96 500	5310 96 500	Lamp	AT604 28V
96 501	5330 96 501	Switch	AZMA-206
96 519	5321 96 519	Switch	AVW 401-R
96 522	5300 96 522	Switch	AVW 402-R
96 523	5300 96 523	Switch	AVW 410-R

RYOBI / ITEK CROSS REFERENCE LIST

96 531	5340 96 531	Switch	CS-16-5N
96 537	5330 96 537	Cap, lens	
96 549	5340 96 549	Switch	M-20112J-2G
96 550	5340 96 550	Bezel	AT-207G
96 554	5340 96 554	Barrier	A3 SA-4001
96 555	5340 96 555	Barrier	A3 SA-4001
96 559	5340 96 559	Switch	C420F-B
96 560	5340 96 560	Switch	C400F-B
96 562	5340 96 562	Plate, end	DGNW-H3
96 564	5340 96 564	Switch body	
96 565	5330 96 565	Switch body	
96 567	5330 96 567	Switch button	
96 568	5330 96 568	Switch button	
96 569	5330 96 569	Switch button	
96 570	5330 96 570	Switch button	
96 571	5330 96 571	Switch body	
96 573	5330 96 573	Switch button	
96 576	5330 96 576	Switch button	
96 577	5300 96 577	Switch	
96 578	5300 96 578	Light section	
96 587	5300 96 587	Plate, end	
96 589	5340 96 589	Switch	AJ4534
96 590	5340 96 606	Switch	AVLW3220DR
96 591	5340 96 591	Switch button	
96 592	5340 96 592	Switch button	
96 593	5340 96 593	Switch button	
96 594	5340 96 594	Switch	A3 SA-5805-77
96 606	5340 96 606	Switch, stop button	AVLW3220DR
96 613-1	5341 96 6131	Switch	E2K-F7MC1-10
96 622	5290 96 622	Guard	A3 SA-5050
96 623	5290 96 623	Switch	C1422F-13
96 624	5290 96 624	Switch	AVW-301R
96 811	5310 96 811	Knob	020-441
96 814	5330 96 814	Cap	040-401 (6 ray)
96 826	5310 96 826	Dial	042-430
96 827	5330 96 827	Knob	SR-70S
96 840	5330 96 840	Knob	CM-45
96 961	5290 96 961	Lamp	SLL-24EG
97 010	5300 97 010	Motor 115v	31K15GK
97 018	5310 97 018	Motor 100v 400w	
97 019	5330 97 051	Motor	
97 020	5330 97 020	Motor 230v 400w	
97 021	5340 97 021	Motor, spray 100W	RC20S
97 023	5330 97 023	Motor, spray 100W	RC20S

RYOBI / ITEK CROSS REFERENCE LIST

97 029	5330 97 029	Motor 115v	
97 033	5290 97 033	Motor 115v 300w	
97 034	5330 97 034	Motor 200v 750w	
97 035	5330 97 035	Motor 100/200v 750w	
97 036-1	5330 97 060	Motor	
97 038	95101001	Motor	
97 051	5330 97 051	Motor	
97 052	5330 97 052	Motor	
97 054	5340 97 054	Motor	
97 060	5330 97 060	Motor	
97 063	5327 97 063	Motor, servo	
97 064	5327 97 064	Drive, servo	
97 065	5330 97 065	Switch, start	
97 066	5340 96 051	Inverter	
97 070	5330 97 070	Belt, V	A-40
97 071	5330 97 071	Belt, V	A-41
97 076-3	5340 96 051	Inverter	
97 091	5300 97 091	Gear head	3GK60
97 092	5290 99 770	Condensor	
97 093	5290 97 093	Switch	
97 095	5330 97 095	Switch	
97 096	5330 97 096	Gear head	4GK-12.5
97 100	5290 97 100	Relay	HG-2 AC220V
97 101	5310 97 101	Relay	HG-2 AC240V
97 107	5300 97 107	Relay	LY-1N DC24V
97 124	5300 97 124	Relay	MY-4N DC24V
97 125	5300 97 125	Relay	LY-2N DC24V
97 126	5300 97 126	Relay	HCSB-DC24V
97 127	5300 97 127	Relay	
97 157	5330 97 157	Relay	NC3D-K-DC24V
97 158	5300 97 158	Relay, keep	NC2D-L2-K-DC24V
97 160	5310 97 160	Relay	S-All AC115V
97 161	5330 97 161	Relay	NC4D-K-DC24V
97 165	5330 97 200	Relay	S-All AC115V
97 166	5330 97 166	Relay	M50-All AC115V
97 167	5330 97 199	Relay	S-A20 AC115V
97 168	5310 97 168	Relay	RRD51C24
97 169	5290 97 169	Relay	AR230V
97 171	5290 97 171	Relay	RH2LB AC100V
97 172	5290 97 172	Relay	115V
97 190	5290 97 190	Relay	
97 192	5340 97 192	Relay	G6A-274P 24VDC
97 199	5330 97 199	Relay	LLD-0915
97 200	5330 97 200	Relay	LLD-1227

RYOBI / ITEK CROSS REFERENCE LIST

97 201	5340 97 201	Switch	LC1D093A60
97 202	5340 97 202	Relay, sermal	LR1-D09310
97 253	5340 97 253	Board, terminal	LY2
97 258	5300 97 258	Socket, relay	AP3844
97 263	5300 97 263	Spring	PYC-P (LY MY)
97 264	5300 97 264	Spring	PYC-1
97 268	5330 97 268	Socket, relay	AW4924
97 269	5310 97 269	Socket, relay	AW4925
97 271	5290 97 271	Socket, relay	PYF14H
97 274	5290 97 274	Block, terminal	SH-3B-05B
97 303	5330 97 303	Switch	V-102
97 306	5300 97 306	Switch	V-15-IC2
97 313	5300 97 313	Switch	VC-1C244
97 332	5330 97 332	Switch	D2MV-5L111-IC2
97 380	5300 97 380	Actuator	VAM21
97 381	5300 97 381	Actuator	VAM22
97 400	5290 97 400	Switch	WD1121 (9)
97 403	5290 97 403	Cap	AT-402
97 412	5300 97 412	Switch	WD-11259
97 417	5310 97 417	Cover, white	AT406
97 419	5330 97 419	Cover, blue	AT406
97 420	5330 97 420	Cover, yellow	AT406
97 423	5310 97 423	Switch	M-2013 SW1S1
97 429	5290 97 429	Switch	
97 500	5300 97 500	Switch	RS-9S
97 501	5300 97 501	Magnet	RS-9M
97 502	5330 97 502	Switch	A2PB-C2MW
97 503	5300 97 503	Switch	A3PA-7071
97 504	5300 96 577	Switch	A2PB-C2MG
97 505	5300 97 505	Switch	DPDTZ201J91
97 506	5300 97 506	Switch	DPDT7203J91
97 528	5300 97 528	Magnet	RS-8MR
97 553	5310 97 553	Switch	
97 561	5300 97 561	Switch	VGAQ-4G-KV1C244
97 563	5330 97 563	Switch	VAQ-4B-K
97 570	5310 97 570	Switch	DLB2141-3RO-L
97 598	5330 97 598	Switch	A3 SA-7011
97 599	5300 98 929	Lamp	SLL-28H
97 602	5300 97 602	Solenoid	MS-10J AC115V
97 603	5300 97 603	Solenoid	MS-35J AC115V
97 604	5300 97 604	Solenoid	AS-10N AC115V
97 606-1	5321 97 606-1	Solenoid	AS-03A AC115V
97 607	5300 97 607	Solenoid	AS-05N AC115V
97 608	6200 97 608	Solenoid	AS-05N AC115V

RYOBI / ITEK CROSS REFERENCE LIST

97 609	5300 97 609	Solenoid	AS-05N AC115V
97 610	5300 97 610	Solenoid	AS-10N AC115V
97 611	5300 97 611	Solenoid	AS-20N AC115V
97 612-1	5300 97 6121	Solenoid	AS-10N AC115V
97 616	5300 97 616	Solenoid	EALD-30-01 DC24V
97 617	5290 97 617	Solenoid	AS-05N 100V
97 618	5300 97 618	Solenoid	AS-05N 230V
97 625	5340 97 625	Valve	AB21-02-05
97 628	5340 97 628	Solenoid	
97 630	5330 97 630	Solenoid	AS-05N AC115V
97 632	5330 97 632	Solenoid	AS-05N AC115V
97 633	5310 97 633	Solenoid	
97 657	5340 97 657	Solenoid	AS20NJ708-015
97 659	5327 97 659	Clutch	
97 660	5290 97 660	Brake	
97 661	5290 97 661	Solenoid	AS-03R AC115V
97 677	5300 97 677	Timer	H3Y-4 DC24V 5S
97 680	5300 97 680	Timer	H3Y-4 DC24V 30S
97 683	5290 97 683	Timer	
97 685	5290 97 685	Timer	
97 687	5310 97 687	Relay	H3Y-4UL DC24V 5S
97 702	5300 97 702	Protector, circuit	375-207-
97 703	5300 97 703	Protector, circuit	374-204-
97 708	5300 97 708	Protector, circuit	374-201-
97 715	5330 97 715	Breaker, single phase	
97 717	5310 97 717	Switch	BS902 6.7A
97 718	5310 97 718	Switch	PKZMO-20/Z4 SUBU
97 719	5300 97 719	Switch	PKZMO-10/ESUB
97 722	5340 97 722	Fuse	6.4 x 30-10A
97 726	5290 97 726	Protector, circuit	
97 727	5300 97 727	Protector, circuit	MRAS 210
97 729-1	5340 97 7291	Switch	PI25E SVB
97 734	5330 97 734	Fuse	0.5A
97 803	5300 97 803	Amplifier	OAS-21A-2
97 804	5290 97 804	Socket	AZ-CA
97 805	5300 97 805	Sensor, photo	ORE-S5
97 812	5330 97 812	Switch	TL-03
97 823	5340 97 823	Sensor	OAS-61LD-2
97 825	5310 97 825	Sensor	
97 826	5310 97 826	Projector, light	
97 827	5310 97 827	Receiver, light	
97 828	5330 97 828	Projector, light	
97 829	5330 97 829	Receiver, light	
97 834	5330 97 8341	Sensor	

RYOBI / ITEK CROSS REFERENCE LIST

97 837	5330 97 837	Photocell	GXL-12F
97 844	5327 97 844	Sensor	GSZ-38
97 850	5300 97 850	Counter	E720-DC24V
97 854	5300 97 854	Counter	E610 DC24V
97 856	5290 97 856	Counter (pre-set)	
97 864	5340 97 864	Counter	
97 865	5330 97 865	Counter	
97 919	5330 97 919	Transformer	
97 921	5300 97 921	Transformer	
97 922	5300 97 922	Transformer	TR 2
97 941	5310 97 941	Transformer	
97 942	5320 97 942	Transformer	
97 947	5330 97 947	Transformer (powder spray)	
97 948	5330 97 948	Transformer	
97 969	5330 97 969	Transformer	
97 975	5340 97 975	Transformer	
97 976	5340 97 976	Transformer	PT-19
97 985	5300 97 985	Transformer	7T-24
98 009-4	5300 98 0094	Box, control	
98 010-5	5300 98 0105	Plate, print	
98 011-1	5300 98 0111	Operation box assy (brown)	
98 012-1	5300 98 0121	Counter, sheet	
98 016-2	5310 98 0162	Counter, cycle	
98 018-5	5300 98 0185	Box, control	
98 019-4	5300 98 0194	Box, control	
98 020-5	5300 98 0205	Box, control	
98 021-1	5300 98 0211	Operation box assy (black)	
98 022-4	5300 98 0224	Box, control	
98 026	530098 026	Plate, timing	
98 038	5300 98 038	Cable, criss cross set	
98 040-1	5300 98 0401	Head, tape inserter	
98 040-2	5300 98 0402	Head, tape inserter II	
98 041-1	5300 98 0411	Plate, print for tape inserter	
98 042	5300 98 042	Driver, relay	
98 064-1	5310 98 0641	Inserter, tape	
98 101-1	5300 98 1011	Inserter, tape (chain)	
98 110	5300 98 110	Switch, cycle assy	
98 116	5310 98 116	Board (use 5310 98 1162)	
98 116-2	5310 98 1162	Board, printed circuit	
98 121	5310 98 121	Box, control	115V
98 122-2	5310 98 1222	Box, control	230V
98 123	5310 98 123	Box, control	100V
98 124-1	5310 98 1241	Box, operation	
98 125-1	5310 98 1251	Box, operation (ivory)	

RYOBI / ITEK CROSS REFERENCE LIST

98 126-3	5310 98 1263	Board, printed circuit	
98 127-3	5330 98 1273	Board, printed circuit	
98 128	5330 98 128	Board, printed circuit	
98 132	5310 98 132	Box, operation (Ryobi)	
98 132-3	5310 98 1321	Box, operation (Ryobi)	
98 133	5310 98 133	Box, operation (Itek)	
98 133-1	5310 98 1331	Box, operation (Itek)	
98 135	5310 98 135	Detector, paper jam	
98 135-1	5310 98 1351	Detector, paper jam	
98 136	5310 98 136	Board, printed circuit	
98 136-1	5320 98 1361	Board, printed circuit	
98 136-2	5320 98 1362	Board, printed circuit	
98 141	5290 98 141	Bushing	
98 142-4	5300 98 1424	Box, control	
98 143-4	5300 98 1434	Box, control	
98 144-4	5300 98 1444	Box, control	
98 145-4	5300 98 1454	Box, control	
98 146-4	5300 98 1464	Box, control	
98 156-1	5330 98 1561	Box, operation (Ryobi)	
98 157-1	5330 98 1571	Box, operation (Itek)	
98 158-2	5330 98 1582	Box, control	100V
98 159-2	5330 98 1592	Box, control	115V
98 160-2	5330 98 1602	Box, control	230V
98 161-3	5330 98 1613	Controller, timing	
98 162-3	5330 98 1623	Board, printed circuit	
98 163-1	5330 98 1631	Detector, paper jam	
98 197-2	5330 98 1672	Box, control	3PH 200V
98 168	5330 98 168	Box, control	
98 169	5330 98 169	Board, printed circuit	
98 179	5340 98 179	Static eliminator	
98 186	5330 98 186	Box, control	
98187	534098187	Static e+C693liminator	
98 190	5327 98 190	Static eliminator	115V
98 191	5290 98 191	Static eliminator	
98 302	5290 98 302	Cord	TU0017
98 303	5290 98 303	Cord	GTC83-0.75
98 304	5290 98 304	Cord	SCTAW018
98 305	5290 98 305	Cord	VSRF-0.75
98 306	5290 98 306	Cord	VCTF-1.25
98 309	5290 98 309	Cord	SAV-1.25
98 336	5290 98 336	Cord 2	
98 378	5290 98 378	Cord	
98 379	5310 98 379	Cord	
98 380	5310 98 380	Cord	

RYOBI / ITEK CROSS REFERENCE LIST

98 500	5290 98 500	Receptacle	170038-1
98 501	5300 98 501	Cover	360010-1
98 504	5300 98 504	Connector	41P
98 507	5300 98 507	Connector	26P
98 509	5300 98 509	Connector	14P
98 510	5300 98 510	Connector	14P
98 514	5290 98 514	Cover	170892-1
98 516	5290 98 516	Terminal	2-YS3A
98 517	5290 98 517	Terminal	1.25-MS
98 525	5330 98 525	Connector	350211-1 4P
98 537	5300 98 537	Cover	1-170823-4
98 550	5300 98 550	Connector	163690-6 8P
98 605	5300 98 605	Connector	13P
98 606	5300 98 606	Connector	1-63690-1 12P
98 633	5290 98 633	Connector	34864
98 645	5310 98 645	Connector	350763-4
98 646	5310 98 646	Connector	350765-4
98 662	5330 98 662	Cap	OP
98 729	5310 98 729	Board, terminal	TSU2502
98 733	5310 98 733	Connector	350429-1 3P
98 734	5310 98 734	Connector	350430-1 4P
98 735	5310 98 735	Connector	350431-1 6P
98 736	5310 98 736	Connector	350433-1 12P
98 737	5340 98 737	Connector	1-480703-04P
98 778	5330 98 778	Connector	
98 784	5340 98 784	Connector	
98 785	5330 98 785	Connector	9P
98 789	5330 98 789	Connector	206705-1 9P
98 790	5330 98 790	Connector (male)	
98 791	5330 98 791	Connector (female)	
98 799	5340 98 799	Cap, connector	
98 804	5290 98 804	Plug, hole	
98 805	5290 98 805	Clamp	3302
98 806	5290 98 806	Clamp	3306
98 809	5290 98 809	Clamp	3330
98 810	5340 98 810	Guide	50-1030
98 811	5300 98 811	Guide, card	
98 813	5300 98 813	Tube	
98 849	5300 98 849	Stud	
98 851	5310 98 851	Guide	50-1050
98 872	5290 98 872	Terminal	
98 886	5321 98 891	Connector	
98 887	5321 98 948	Connector	
98 891	5321 98 891	Connector	

RYOBI / ITEK CROSS REFERENCE LIST

98 892	5330 98 948	Connector	
98 900	5300 98 900	Lamp	S-F4150
98 901	5300 98 901	Lamp	S-F5059
98 922	5330 98 922	Diode, light emission	SF505
98 923	5330 98 923	Diode, light emission	BD-70
98 925	5340 98 925	Lamp (use 5340 98 930)	LSHD-2R
98 926	5340 98 926	Lamp	SLL-24EY
98 929	5300 98 929	Lamp	SLL32
98 947	5340 98 947	Separator	BNL6
98 960	5290 98 960	Board, terminal	2P
98 962	95511001	Base, terminal	621-17P
98 963	5290 98 963	Board, terminal	BN211 18P
98 976	5310 98 976	Board, terminal	TSU6 006 23
98 979	5310 98 979	Board, terminal	
98 982	5330 98 948	Terminal	BA-211T
98 984	5330 98 984	Separator	BNL5
98 991	5310 98 991	Board, terminal	ML-3391 6P
99 235	5300 99 235	Rectifier	DS5B-N-L
99 250	5290 99 250	Rectifier	
99 623	5330 99 623	Variable resistance	200KOH
99 630	5330 99 630	Variable resistance	3KOHM
99 632	5330 99 632	Variable resistance	6000HM
99 634	5330 99 634	Volume	
99 640	5290 99 640	Resistor	20KOHM20W
99 641	5290 99 641	Resistor	10HM30W
99 711	5300 99 711	Filter, noise	ZGP-22RS-01
99 712	5300 99 712	Killer, surge	S1-B
99 713	5290 99 713	Killer, surge	S2-A
99 722	5310 99 722	Fuse 6.4 x 30	10A
99 736	5300 99 736	Capacitor	220 50 WV
99 754	5290 99 754	Filter, noise	ZAC2205.00
99 759	5300 99 759	Condenser	
99 766	5290 99 766	Capacitor	220 50V
99 770	5290 99 770	Capacitor	40 250Q
99 771	5330 99 771	Killer, surge	
99 772	5340 99 772	Killer, surge	DCR2-20D50
99 774	5290 99 774	Killer, surge	
99 777	5290 99 777	Condenser	
99 779	5330 99 779	Filter, noise	ZGB-2203-01
99 789	5290 99 789	Capacitor	1500MF 250V
99 900	5300 99 900	Clutch	B005
99 913	5330 99 913	Knob	CM-15S
99 920	5300 99 920	Fan	12C09 100V
99 923	5290 99 923	Guard	

RYOBI / ITEK CROSS REFERENCE LIST

99 928	5340 99 928	Lamp, glow	FG-1E
99 933	5340 99 933	Socket	L-420
99 938	5310 99 938	Buzzer	EB2124
99 939	5290 99 939	Plug, hole	P1375
99 945	5310 99 945	Plug, hole	DP-1000
99 948	5340 99 948	Bushing	BU6928
99 953	5290 99 953	Fan	U12CB9 115V
99 954	5330 99 954	Fan	12CK9 230V
99 959	5340 99 959	Holder	NZ30120
99 960	5340 99 960	Lamp, flourescent	15W
99 962	5340 99 962	Stabilizer	60Hz
99 966	5330 99 966	Fan	
99 967	5330 99 967	Spacer	
99 972	5340 99 972	Killer, surge	DCR2-20D50
99 998	5290 99 998	Regulator, switch	KMC-30-1
99 999	5290 99 999	0	DP1093