

# HAMADA 700/E-47 PARENT

## Frequently Used Part Numbers

### Rollers

All units after serial #9015-04273 (Parent only) have a soft rubber pan roller and a hard metering roller. Units with previous serial numbers must be upgraded.

X07-0110	Form Roller, Soft
X07-0309NS	Pan Roller, Soft
X07-0409	Oscillator Roller, Hard
XSA-070210NS	Metering Roller Assy., Hard (Roller, shaft, bearings, collars)
XSA-070505	Intermed. Roller Assy., Soft (Roller, shaft, bearings, collars, roll pin)

### Side Frame Assemblies

XSA-010650NO	OPS Side Frame Assy. (Side frame w/ bearings)
XSA-010650NN	NOPS Side Frame Assy. (Side frame w/ bearings)

### Gears

XSA-03211538	Form Gear Assy. (Gear w/ clutch bearing)
XSA-0321152N	Exterior Pan & Form Gear Assy. (Gear w/ clutch bearing) (2 per dampener)
XSA-03211520	Exterior Idler Gear Assy. (Gear, bearing, shoulder bolt) (2 per dampener)

### Bearings


(After serial #9211-08645)	
X06-108	Sealed Ball Bearing, Side Frame (2 per dampener)
X06-346038*	Thin Flanged Bushing (2 per dampener) *4 per dampener before serial #9211-08645
X06-103	Sealed Ball Bearing, Pivot (2 per dampener)

### Miscellaneous

XSA-9903	Metering Thumb Screw Assy. (Thumb screw, ratchet gear, set screw)
X09-0102	Compression Spring (2 per dampener)
XSA-1111	Water Pan Assy. (w/ pan bolts)
X99-28	Water Pan Hose
X99-61	Wash Up Bottle
X88-25	Installation Manual

**FAX YOUR ORDER  
TO ACCEL TOLL FREE!  
1 (800) 365-6510**

a. 3/16" (5mm)      b. 1/8" (3mm) - 5/32" (4mm)

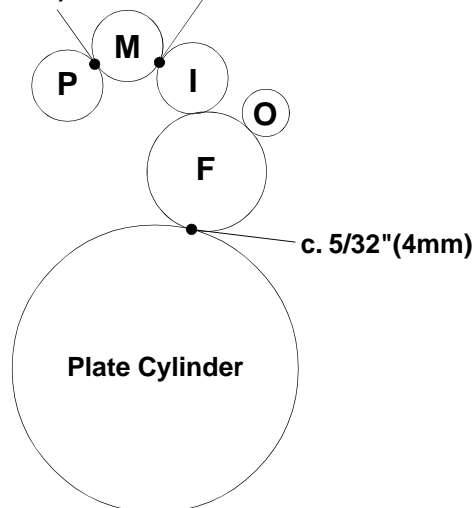

#### Adjustments

- a. Metering to Pan
- b. Metering to Intermediate
- c. Form to Plate

#### Roller Description

- P = Pan, Soft
- M = Metering, Hard
- I = Intermediate, Soft
- O = Oscillator, Hard
- F = Form, Soft